



General Offices
627 Amersale Drive
Naperville, IL. 60563

Toll Free: 1-800-323-5664
Phone: 1-630-897-8489
Fax: 1-630-897-0573
Web Site: www.belson.com

PARK RANGER

Thank you for buying a BELSON OUTDOORS quality product.

Please read and follow assembly instructions. Refer to appropriate page depending on the table you wish to put together. If the lumber is not provided by Belson, follow drilling instructions on page (2).

 
INDEX

- | | |
|--|--|
| 1) FRAME KIT CONTENTS | 4) WOOD TABLE U. ACCESS (ADA) ASSEMBLY INST. |
| 2) LUMBER CONTENTS AND WOOD DRILLING INST. | 5) RECYCLED PLASTIC TABLE ASSEMBLY INST. |
| 3) WOOD TABLE 6' AND 8' ASSEMBLY INST. | 6) RECYCLED PLASTIC TABLE (CONTINUED) |

PR-WF FRAME KIT CONTENTS:


(2) SUPPORT BRACE

700081




(1) HARDWARE BAG

702303

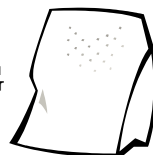


(2) TOP "L" BRACKET

700023

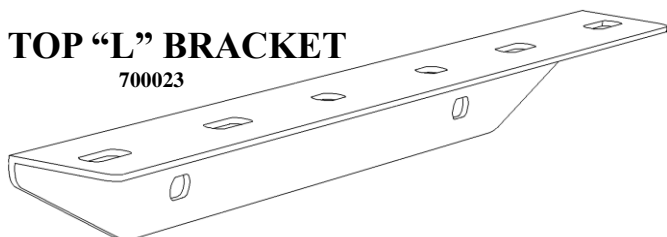


(2) SEAT BRACKET

700004

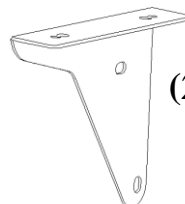


(2) SEAT BRACKET

700005

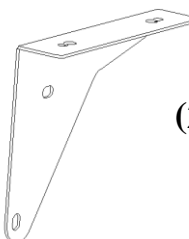


(1) CENTER CHANNEL

700063

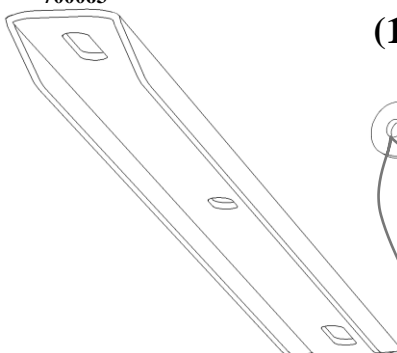


(4) PARK RANGER "J" LEG

700203

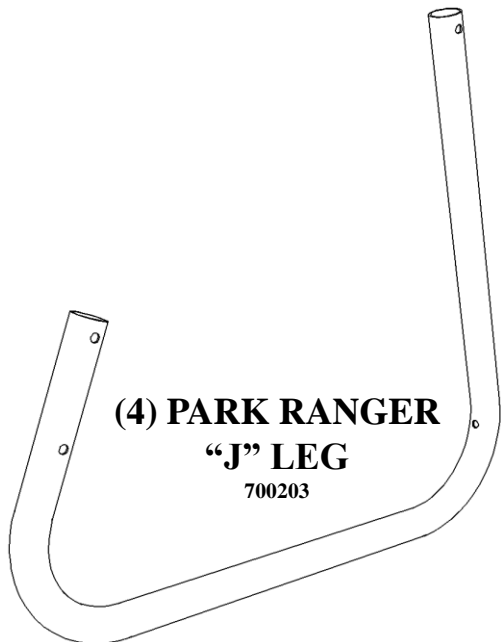



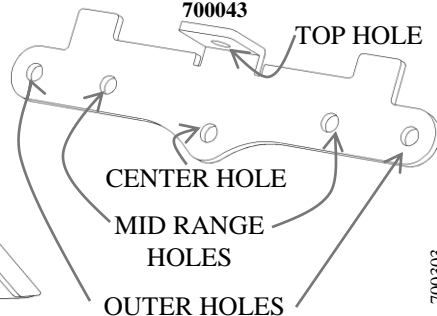


(1) CENTER BRACKET

700043



BELSON PRE CUT & PRE DRILLED LUMBER KIT (OPTIONAL)

LUMBER KIT CONTENTS:


	CENTER (1)		5 HOLES
	SIDE (2)		5 HOLES
	SEAT (2)		4 HOLES

THE SIZE OF THE BOARDS DEPENDS ON TABLE/KIT MODEL, EITHER 6' OR 8' SEE INSTRUCTIONS FOR ASSEMBLY.

BOARD PICNIC TABLE DRILL PATTERN

TOOLS NEEDED: drill, 3/8" drill bit, pencil and tape measure or ruler.

RECOMMENDED LUMBER: 2" x 10" Nominal (1-1/2" thick by 9-1/4" wide).

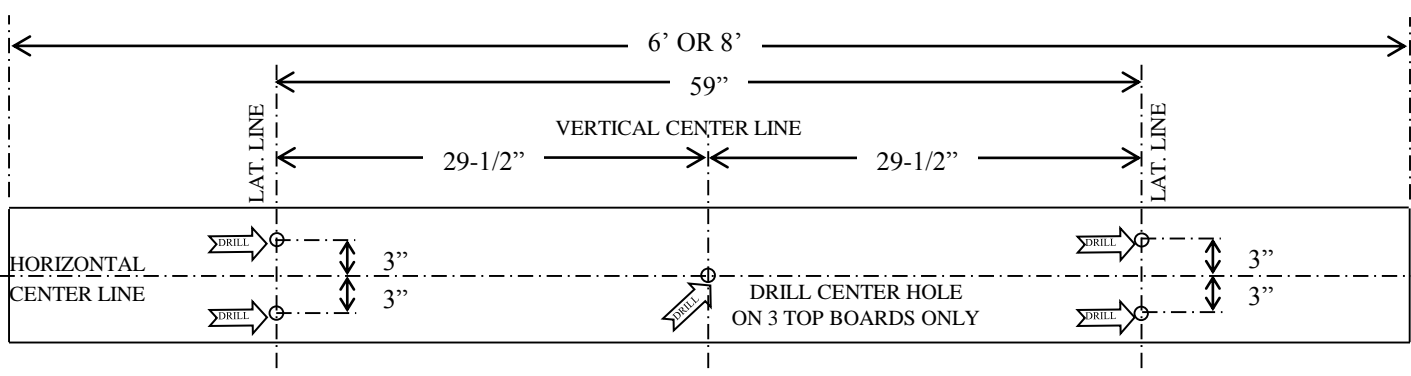


- 1.-Make sure all 5 boards are of consistent length, roughly 6' or 8' (two 6' and three 8' for ADA models).
- 2.-Lay all 5 boards on a flat surface that will not damage the wood with the best side down.
- 3.-Draw centered *Vertical* and *Horizontal Lines*, then two *Lateral Lines* 29-1/2" from *Vertical Center Line* on all boards (this will be your reference for hole locations).
- 4.-Drill 3/8" diameter holes in boards per drill pattern and notes indicated above.
- 5.-If desired, paint or seal before assembly.

6' AND 8' WOOD PARK RANGER ASSEMBLY INSTRUCTIONS

TOOLS REQUIRED: 9/16" wrench and hammer.


- 1.- Insert carriage bolts through 3 Top Boards best face and lay on a non-abrasive flat surface that will not damage the lumber with the best side facing down.
- 2.- Align Top Boards and space them about 1/8" apart (use Seat Brackets as spacers).
- 3.- Place 2 Top "L" Brackets as shown and hand tighten nuts in place.
- 4.- Place the Center Channel with the legs up as shown and hand tighten the 2 outer nuts. Attach Center Bracket's center hole to the center bolt and hand tighten nut.

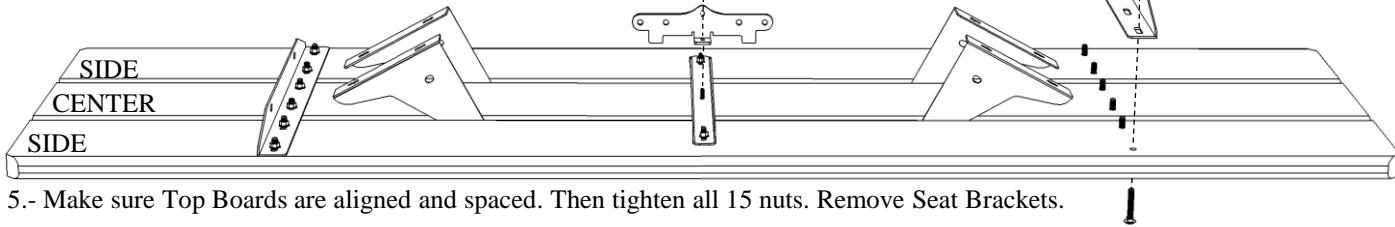

- 5.- Make sure Top Boards are aligned and spaced. Then tighten all 15 nuts. Remove Seat Brackets.


- 6.- Place brace between 2 table "J" Legs and insert 3-1/2" long bolt. Hand fasten nut.

Note: Do not fully tighten any of the nuts from steps 6-8 until step 13 below.

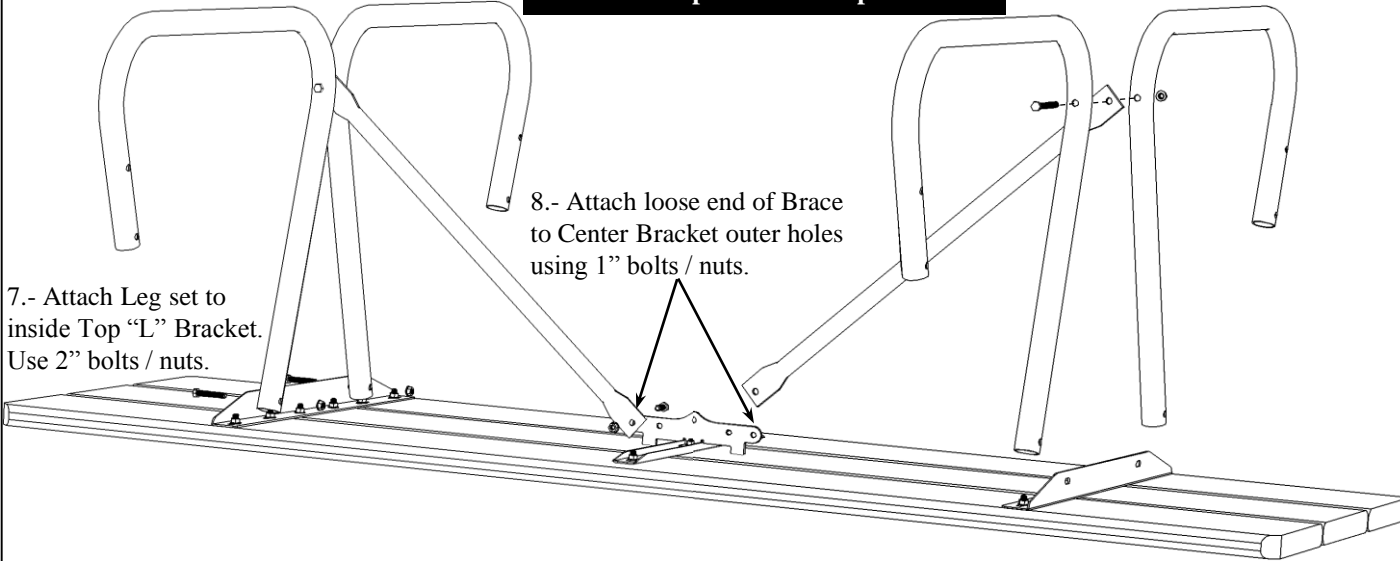


- 7.- Attach Leg set to inside Top "L" Bracket. Use 2" bolts / nuts.

- 8.- Attach loose end of Brace to Center Bracket outer holes using 1" bolts / nuts.

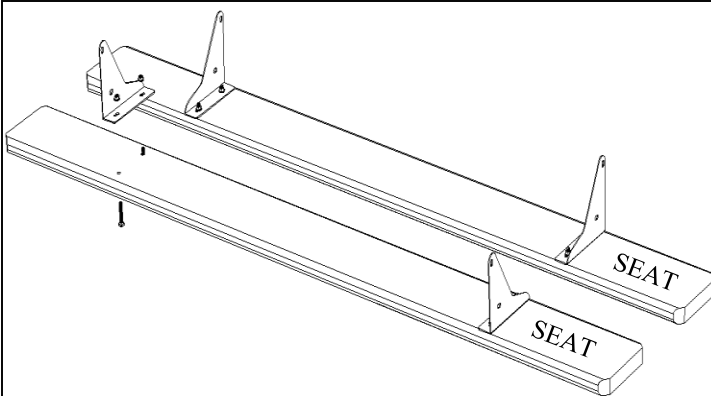

- 9.- Insert carriage bolts through Seat Boards best face and lay on a non-abrasive flat surface that will not damage the lumber with the best side facing down.
- 10.- Attach Seat Brackets to boards as shown and tighten firmly.

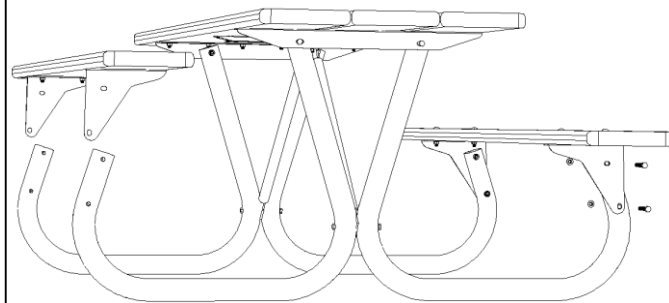


- 11.- Flip the partial table assembly into an upright position.
- 12.- Attach Seats to Frame with table legs inside Seat Brackets as shown. Use 2" bolts / nuts.
- 13.- Tighten all nuts firmly, including assembled parts in steps 6, 7 and 8.
- 14.- The Picnic Table is finished.

UNIVERSAL ACCESS (ADA) WOOD PARK RANGER ASSEMBLY INSTRUCTIONS

TOOLS REQUIRED: 9/16" wrench and hammer.


- 1.- Insert carriage bolts through 3 Top Boards best face and lay on a non-abrasive flat surface that will not damage the lumber with the best side facing down.
- 2.- Align Top Boards and space them about 1/8" apart (use Seat Brackets as spacers).
- 3.- Place 2 Top "L" Brackets as shown and hand tighten nuts in place.
- 4.- Place the Center Channel with the legs up as shown and hand tighten the 2 outer nuts. Attach Center Bracket's center hole to the center bolt and hand tighten nut.

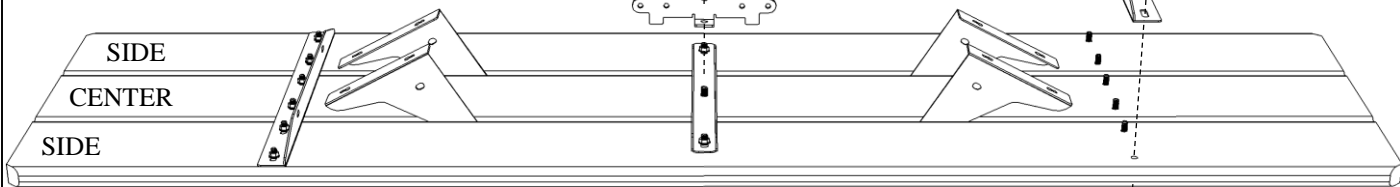

- 5.- Make sure Top Boards are aligned and spaced. Then tighten all 15 nuts. Remove Seat Brackets.


- 6.- Place brace between 2 "J" Legs and insert 3-1/2" long bolt. Hand fasten nut.

Note: Do not fully tighten nuts from steps 6-8 until step 13 below.

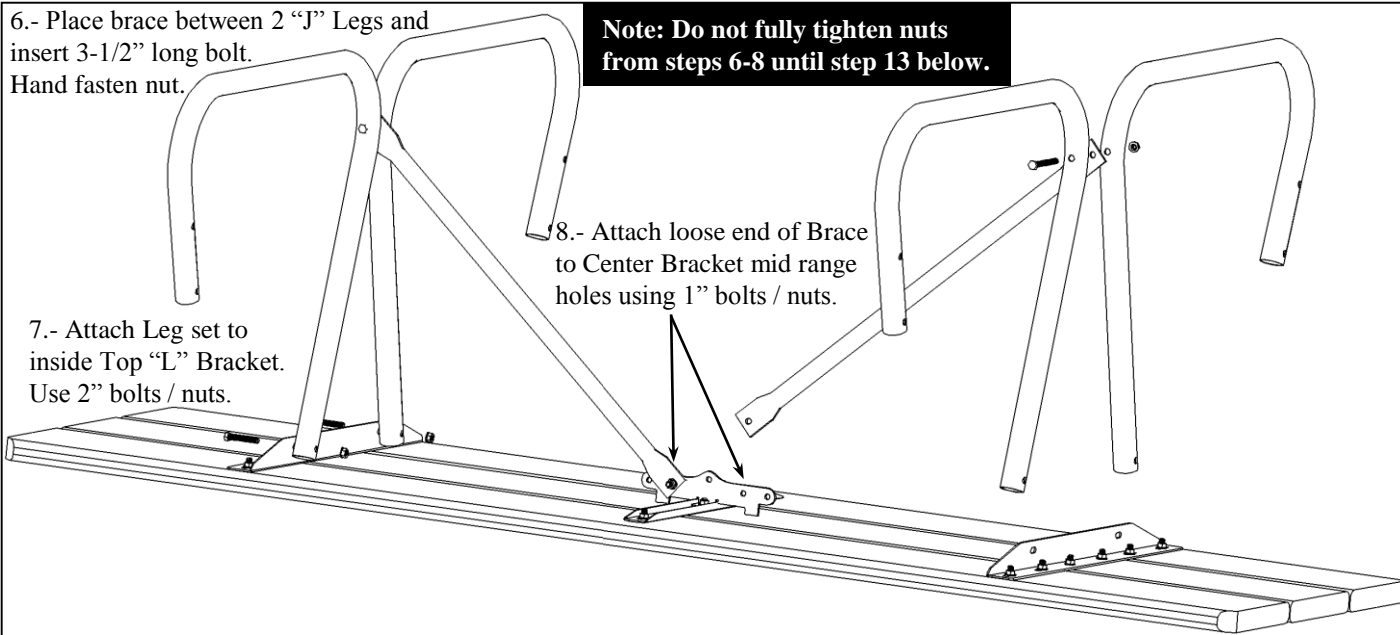


- 7.- Attach Leg set to inside Top "L" Bracket. Use 2" bolts / nuts.

- 8.- Attach loose end of Brace to Center Bracket mid range holes using 1" bolts / nuts.

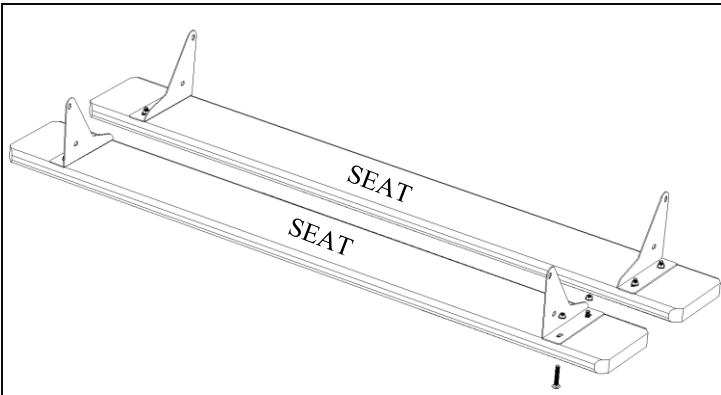

- 9.- Insert carriage bolts through Seat Boards best face and lay on a non-abrasive flat surface that will not damage the lumber with the best side facing down.
- 10.- Attach Seat Brackets to boards as shown and tighten firmly.

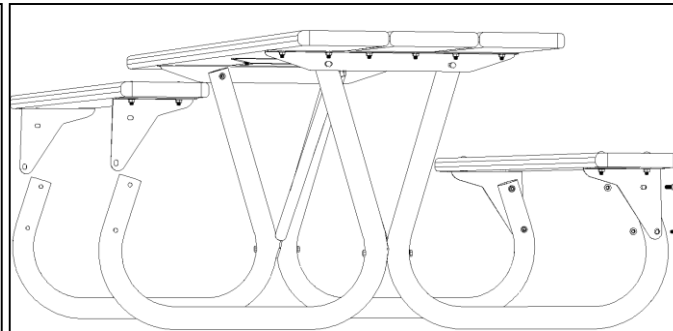

- 11.- Flip the partial table assembly into an upright position.
- 12.- Attach Seats to Frame with table legs inside Seat Brackets as shown. Use 2" bolts / nuts.
- 13.- Tighten all nuts firmly, including assembled parts in steps 6, 7 and 8.
- 14.- The Picnic Table is finished.