


Model # PLS8WB-P

Instructions Sheet


ECONO-MIZER BENCH

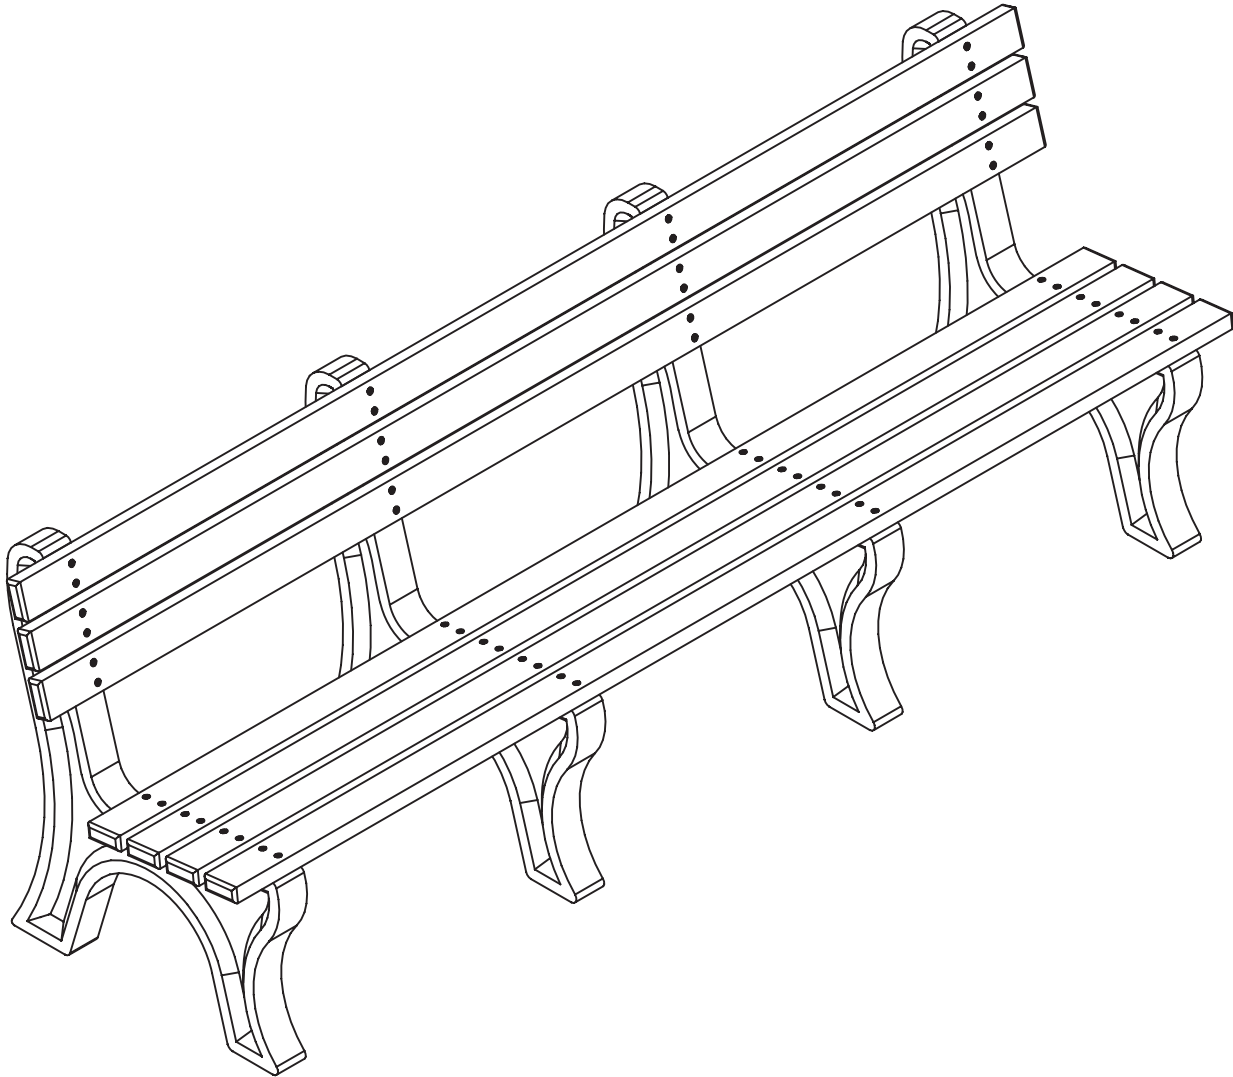


BEFORE ASSEMBLY, PLEASE MAKE SURE ALL COMPONENTS ARE INCLUDED.



FP - FASTENER PACK
(1) - ONE FASTENER PACK

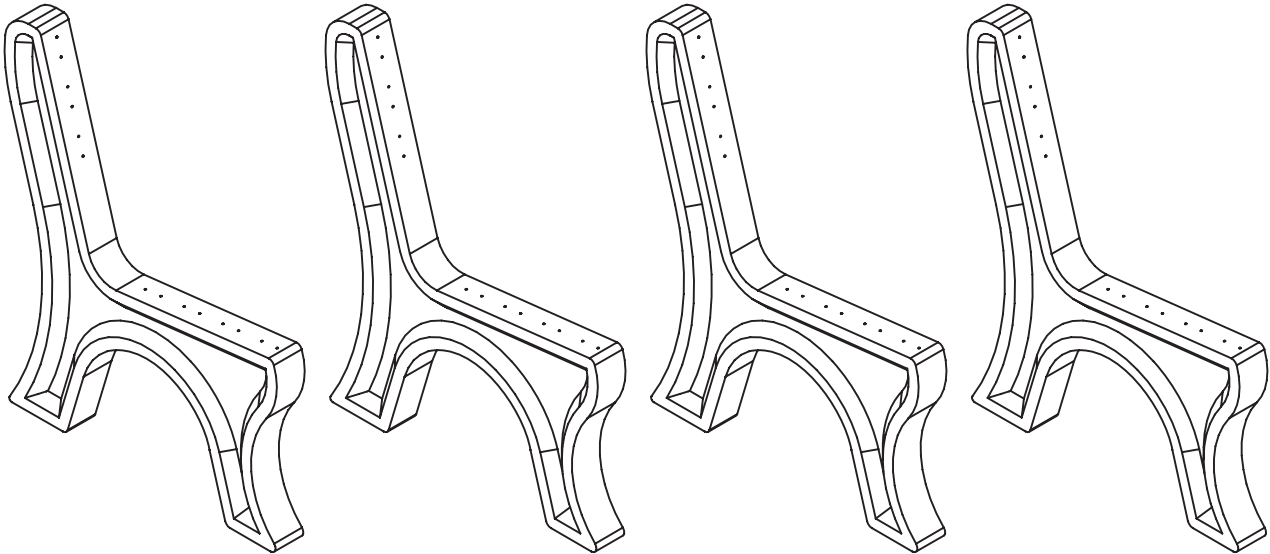

B - BENCH
(4) - FOUR BENCH ENDS

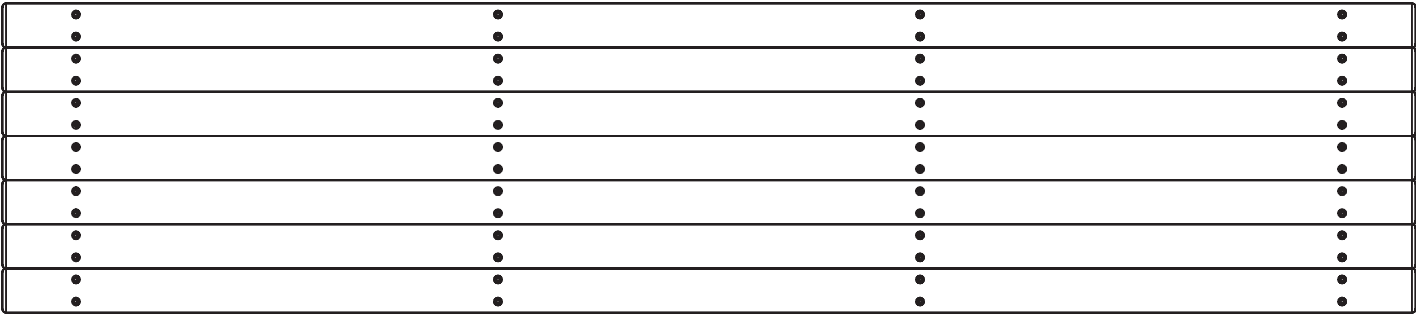

A - BACK BENCH BOARD
(7) - SEVEN BENCH BOARDS

BEFORE ASSEMBLY, PLEASE MAKE SURE ALL FASTENERS ARE INCLUDED.

56 - #12 X 3" FLAT HEAD PHILLIPS SCREW




ALSO NEED FOR THIS ASSEMBLY WILL BE THE FOLLOWING MATERIALS:

1 - #3 PHILLIPS DRIVE BIT

FIG #1:


IN ORDER TO MAKE THE ASSEMBLY OF THIS DELUXE BENCH EASIER WHILE GOING THROUGH THE ASSEMBLY PROCESS THE BOARD POSITIONS ARE NUMBERED AND WILL BE REFERENCED IN LATER STEPS.

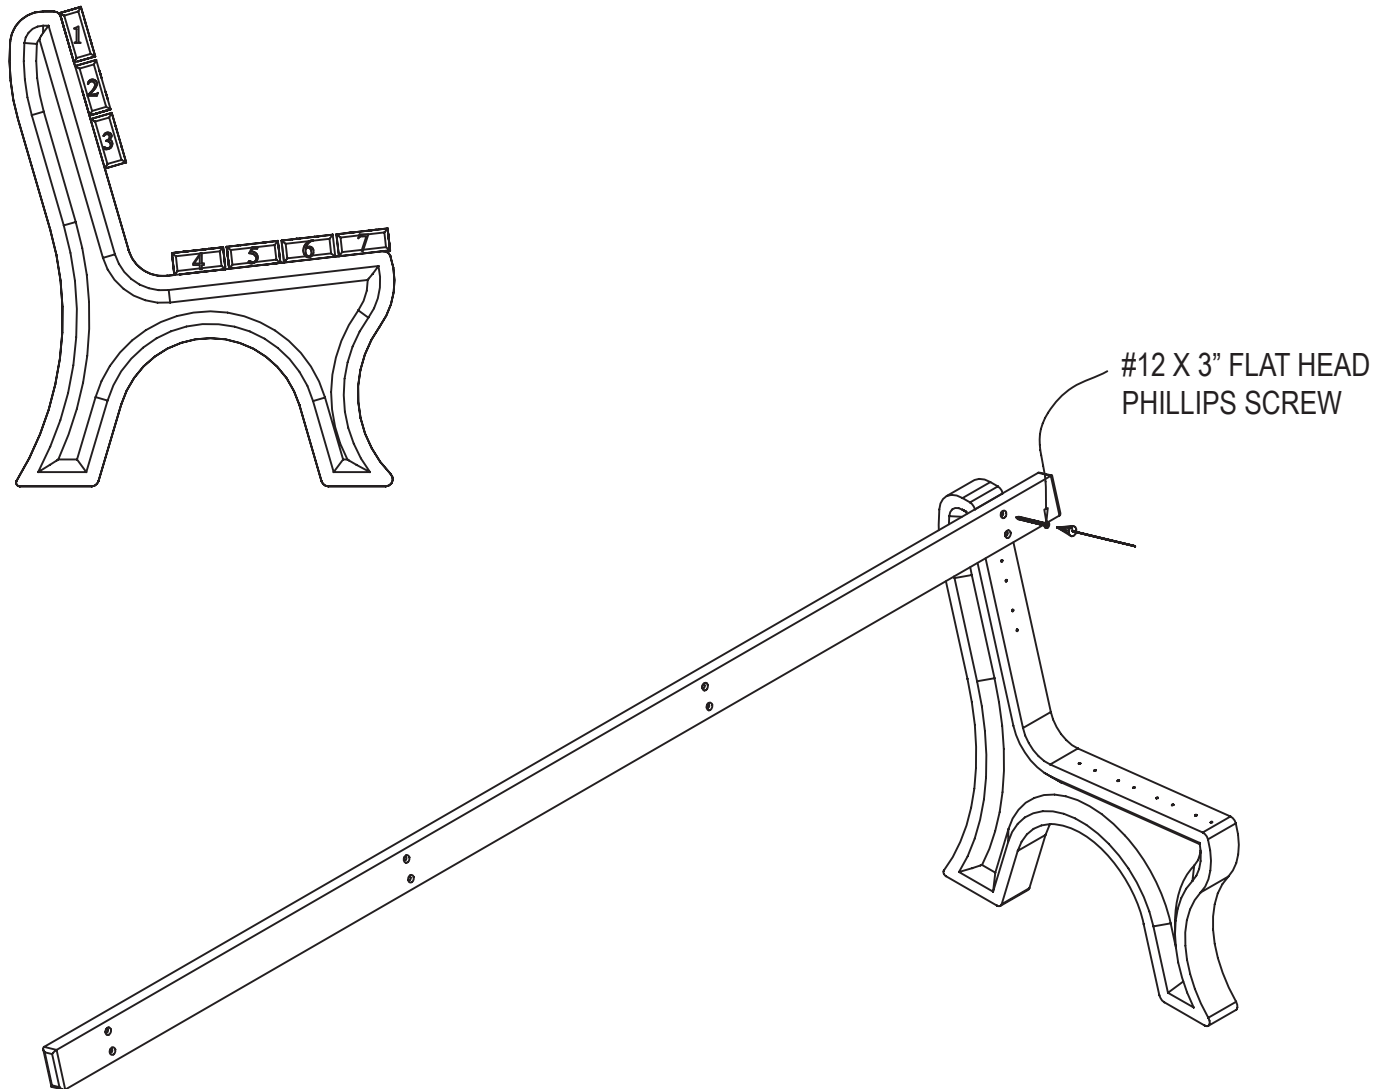

STEP #1:

STAND (1) ONE BENCH END UPRIGHT AND PLACE (1) ONE BENCH BOARD ON POSITION 1 BEING SURE TO ALIGN THE PRE-DRILLED HOLES TO THE PILOT HOLES IN THE BENCH END. AFTER THE HOLES ARE PROPERLY ALIGNED, FASTEN WITH (1) ONE #12 X 3" FLAT HEAD PHILLIPS SCREW IN THE TOP PRE-DRILLED HOLE.

NOTE: DO NOT TIGHTEN BOLTS COMPLETELY. THIS WILL BE DONE IN A LATER STEP.

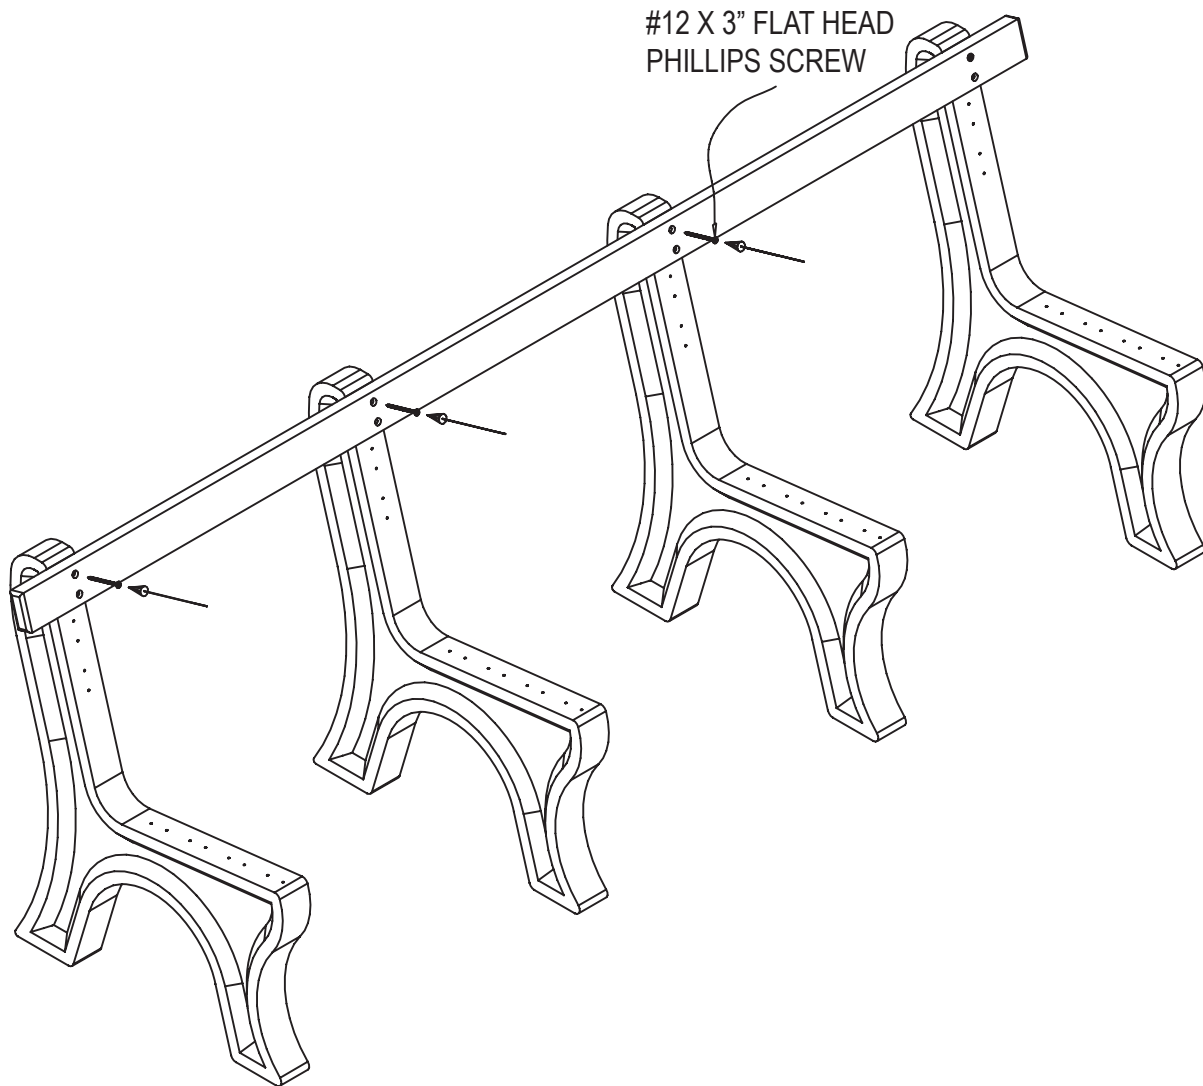

STEP #2:


STAND THE OTHER (2) THREE BENCH ENDS UPRIGHT, ONE AT A TIME, AND PLACE THE BENCH BOARD ALREADY ATTACHED TO THE FIRST BENCH END, ON POSITION 1 BEING SURE TO ALIGN THE PRE-DRILLED HOLES TO THE PILOT HOLES IN THE BENCH END. AFTER THE HOLES ARE PROPERLY ALIGNED, FASTEN WITH (1) ONE #12 X 3" FLAT HEAD PHILLIPS SCREW IN THE TOP PRE-DRILLED HOLE.

NOTE: DO NOT TIGHTEN SCREWS COMPLETELY. THIS WILL BE DONE IN A LATER STEP.

STEP #3:

ALIGN THE BOTTOM PRE-DRILLED HOLES TO THE PILOT HOLES IN THE BENCH END. AFTER THE HOLES ARE PROPERLY ALIGNED, FASTEN WITH (1) ONE #12 X 3" FLAT HEAD PHILLIPS SCREW PER HOLE.


NOTE: BE SURE TO TIGHTEN SCREWS COMPLETELY AFTER THIS STEP.

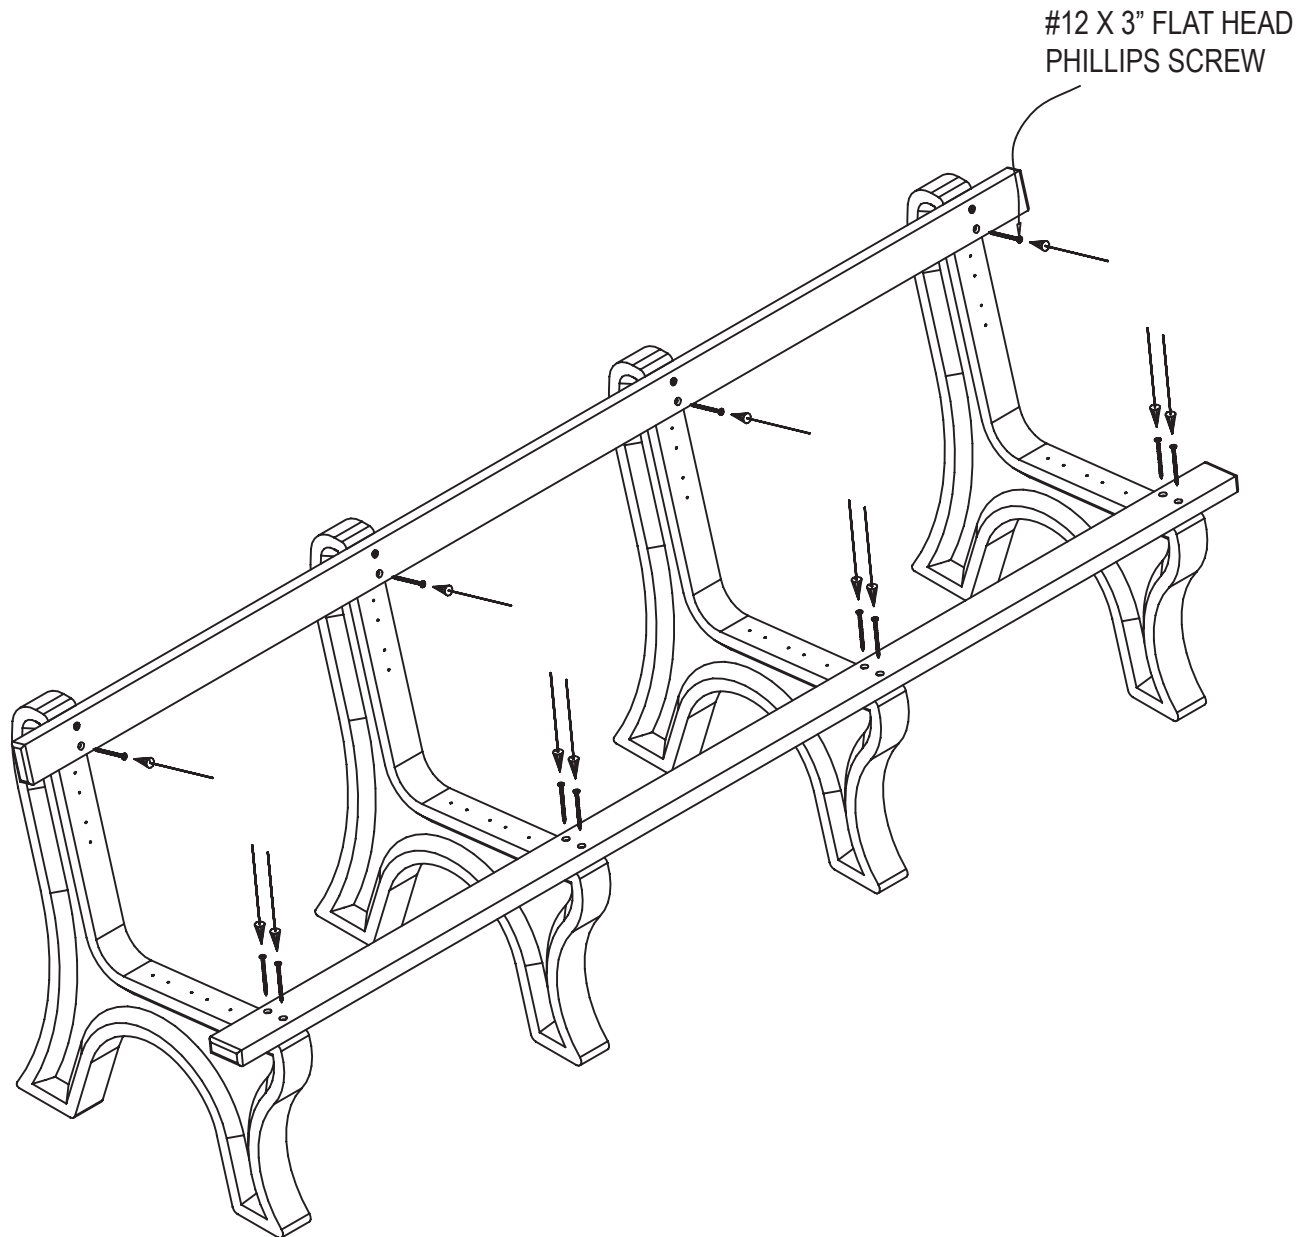

STEP #4:

PLACE A SECOND BENCH BOARD ON POSITION 7. REPEAT STEPS 1 - 3 TO ATTACH. USE (1) ONE #12 X 3" FLAT HEAD PHILLIPS SCREW PER HOLE TO FASTEN.

#12 X 3" FLAT HEAD
PHILLIPS SCREW

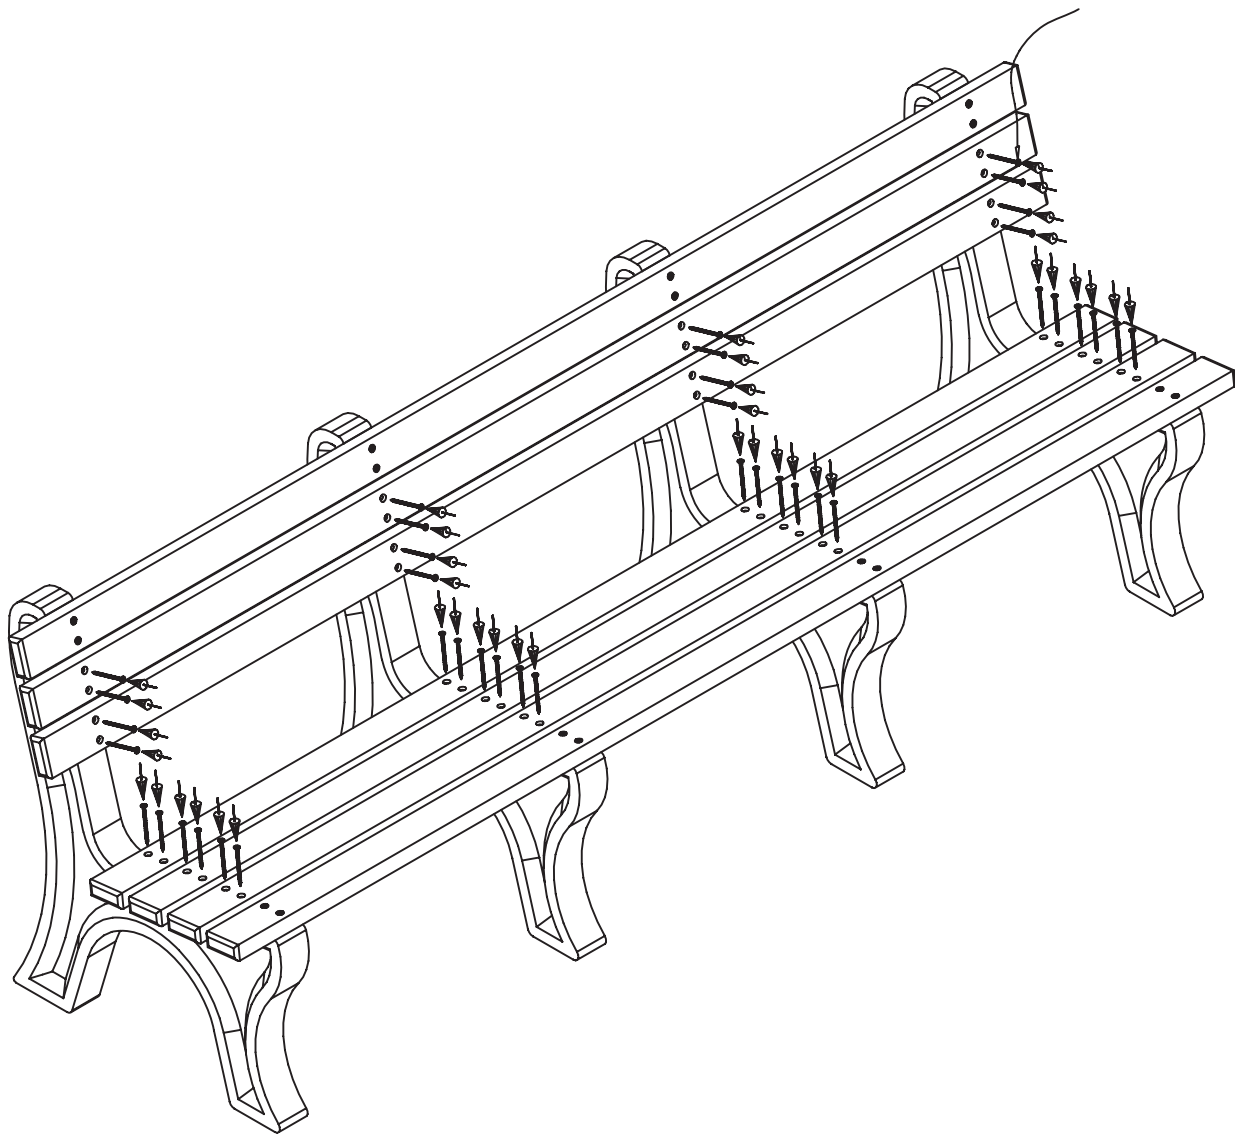

STEP #5:
REPEAT STEPS 1 - 3 TO ATTACH BENCH BOARDS ON POSITIONS 2, 3, 4, 5 & 6. USE (1) ONE #12 X 3"
FLAT HEAD PHILLIPS SCREW PER HOLE TO FASTEN.